

Pop-up gazebo BRIMO

Package contents, assembly, anchoring, taking down, maintenance, conditions of use and warranty. Read the entire manual before use and keep it for future reference.



Type	Pop-up (folding) gazebo – mobile shelter with a quick-folding scissor frame
Intended use	Short-term, temporary cover under the user's supervision – not permanent cover
Putting up	1, max. 2 people
Anchoring	Always – pegs and guy ropes on soft ground, weights on hard surfaces
After use	Take down, dry and store; overnight only when supervised

⚠ Before buying and before use, read the section '**Intended use and conditions of use**' at the end of this manual – it will tell you whether this gazebo is right for you.

Contents

- Package contents
- Putting up the gazebo (steps 1 – 7)
- Anchoring the gazebo
- Taking down the gazebo (steps 1 – 7)
- Cleaning and storage
- Recommended accessories
- Intended use and conditions of use – is this gazebo right for you?
- Things you should know
- Warnings and weather conditions
- Safety and liability for damage
- Warranty and claims

The accessory photos and orange links in this PDF are clickable – they open the relevant product on www.brimo.ie.

Package contents

The exact package contents depend on the model purchased and are listed with the product on www.brimo.ie. The package includes:

- folding (scissor) frame with telescopic legs,
- gazebo roof,
- side walls – on models with walls (number depends on the model); ‘without walls’ models are supplied without walls,
- set of steel pegs (8 – 12 pcs depending on the model) and 4 guy ropes,
- protective carry bag.


⚠ On receipt, check that the package is complete and that no parts are damaged. Let us know about any missing or damaged parts before first use – do not put up a damaged gazebo.

Putting up the gazebo

⚠ Ideally, put up the gazebo with two people, on a level surface free of sharp objects, away from power lines, tree branches and other obstructions. Do not put up the gazebo in wind or a storm.


1 Step 1 - Standing the frame up

Stand the gazebo frame on its legs in the centre of the set-up area. With a partner on the opposite side of the frame, grip 2 outer legs and lift the frame slightly to create some slack. Then take a few steps back until you have extended the frame to full arm's length, approximately 150 cm.

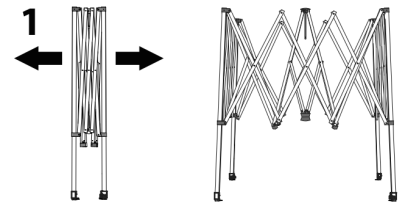


2 Step 2 - Fitting the roof

Place the roof on the frame. Unfold the roof and align the corners and peak(s) with the frame. Attach the hook-and-loop (Velcro) fasteners on the inside of the roof corners to the top of each frame leg. Fit the points on the inside of the roof peak onto the peak(s) of the frame. The frame peaks are in the centre of the top of the frame and are T-shaped with a round plastic end cap.

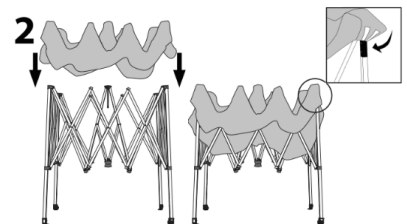


3 Step 3 - Extending the frame

Grip the bottom of the frame between the legs, where the frame bars form a 'V'. Lift slightly and walk slowly backwards until the frame is fully extended.

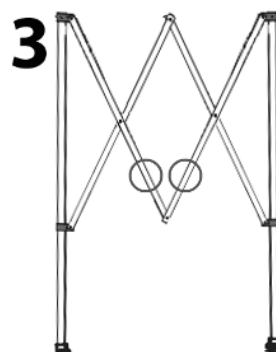


4 Step 4 - Locking the sliders

Hold the frame leg with one hand and with the other hand push up the slider at the top of the leg. The sliders must lock into place, with the spring in the slider engaging in the hole in the leg (you will hear a click). Repeat on all legs.

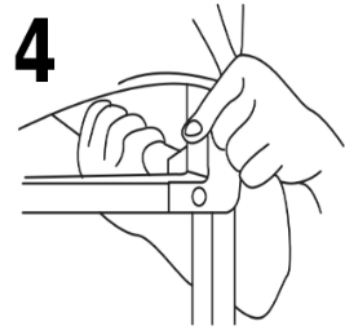


5 Step 5 - Securing the roof with straps

Loop the 4 or 6 buckle straps around the horizontal frame bars and click the buckles shut. Then pull the straps tight. The buckles are on the inside of the roof edge.

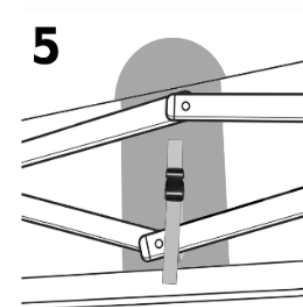

6 Step 6 - Adjusting the height


The legs offer several height settings. Start on one side of the gazebo by gripping the slider at the bottom of the leg and pressing the button on the slider with your thumb. Lift the leg and the telescopic inner section of the leg will slide out. Release the button to lock the slider at your chosen height. Repeat on the opposite side of the gazebo. For the 3 x 6 m size, extend the middle legs last.

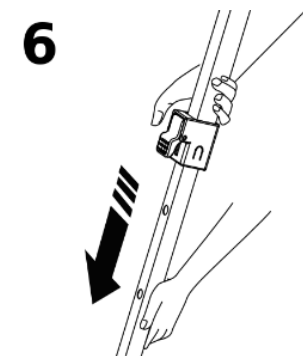

7 Step 7 - Anchoring

The gazebo must be anchored for the entire time it is up. On unpaved ground, use 2 pegs per leg. Tie the 4 guy ropes to the 4 corners of the roof and the other end to a peg or a stable object on the ground. On hard surfaces, use weights - steel weights, sandbags or water weight bags (see Anchoring the gazebo).

www.brimo.ie/weights-for-pop-up-gazebos

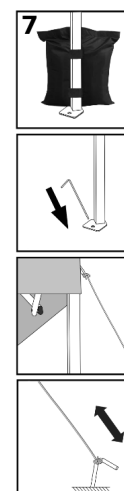

Anchoring the gazebo

The gazebo must be anchored for the entire time it is up – even when there is no wind. An unanchored gazebo can be lifted, overturned or blown away by even a light gust of wind and cause personal injury or damage to property. Choose the anchoring method according to the surface. Click on a photo to open the product.



Tent pegs – grass, soil
> www.brimo.ie/tent-pegs



Guy rope attached to a roof corner
> www.brimo.ie/tent-pegs



Steel leg weight
> www.brimo.ie/steel-weights-for-tent



Sandbag weight
> www.brimo.ie/set-of-sandbags-for-the-tent



Water weight bag
> www.brimo.ie/water-weight-bag



Stackable steel weights – hard surface
> www.brimo.ie/steel-weights-for-tent

 
Taking down the gazebo

⚠ Take down the gazebo after use (at the end of the event), when the weather worsens and whenever nobody will be present with it. Ideally, take it down with two people.

1

Step 1 - Removing the anchoring


Remove all pegs from the ground and any other anchoring. Remove the anchoring from the legs (anchoring accessories).



2

Step 2 - Lowering the height


Start on one side of the gazebo by gripping the slider at the bottom of the leg and pressing the button on the slider with your thumb. The telescopic inner section of the leg will slide in. Repeat on the opposite side of the gazebo. For the 3 x 6 m size, retract the middle legs first.

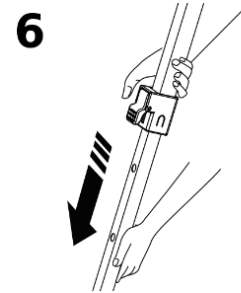

3

Step 3 - Releasing the straps


Release the 4 or 6 buckle straps from the horizontal frame bars.

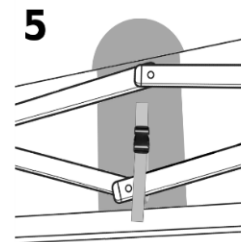

4

Step 4 - Releasing the sliders


In the corner (inside the gazebo), press the button to release the leg slider. Take care not to trap your hands - keep them away from the bottom of the slider (where the plastic ends), as the slider will move down once released. If the slider is difficult to release after pressing the button, relieve the tension by lifting the frame bar attached to the slider.

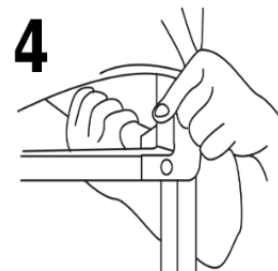

5

Step 5 - Removing the roof


Detach the roof from the frame by undoing the hook-and-loop fasteners on the inside of the roof corners, and release the points on the inside (centre of the roof). The roof may only stay on the frame if you do not transport the gazebo and do not store it lying down. **Damage to the roof worn through by the frame during transport, or by the frame pressing on the fabric when folded, is not covered by the warranty.** The scissor mechanism of the frame does not cut through the roof by itself – wear-through of the roof at the scissor mechanism is caused by friction or pressure of the frame on the fabric during transport or when stored with the roof on the frame.

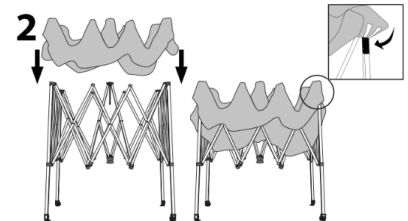

6

Step 6 - Folding the frame

Grip the top of the frame between the legs, where the frame bars form an inverted 'V'. With your partner, lift the frame slightly and walk slowly towards each other. Halfway, when the legs are about 150 cm apart, grip both legs from the outside and continue. Take care not to trap your fingers and hands in the frame!

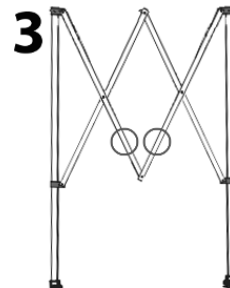

7

Step 7 - Packing away

Place the frame in the protective carry bag or a bag, and transport and store it as described in the Storage section. The wheeled carry bag (accessory) is more convenient.

www.brimo.ie/carrying-bag-for-tent-frame



Cleaning

For maximum fabric life, we recommend hand washing with a soft brush using mild soap and water. Before storage, the fabric must be thoroughly rinsed and dried. Never use harsh or abrasive cleaning products or bleach. Do not machine wash. To make opening and closing the BRIMO frame easier, you can spray a small amount of silicone onto the legs (silicone not included).

Storage

Before storing the gazebo, make sure all parts are dry. A wet gazebo or a damp environment during storage can cause mould and corrosion. Before folding, release the walls and roof from the frame (undo the fastenings). The roof may stay on the frame. If you transport the gazebo after folding, we advise removing the roof from the frame. While on the frame, the roof must not be transported or stored lying down, otherwise the roof may be damaged. When folding, take care not to trap your fingers or hands in the frame. If the gazebo was wet when folded, put it up again as soon as possible and let it dry.

Recommended accessories

BRIMO accessories are made for our gazebos. Click on the photo or link.



Wheeled carry bag

Zip the folded frame inside and wheel it away like a suitcase. Protects the frame and roof during transport and storage.

> www.brimo.ie/carrying-bag-for-tent-frame



Awning for pop-up gazebo

Extends the shade and rain protection in front of the gazebo – ideal for stalls and markets.

> www.brimo.ie/pop-up-gazebo-awning



Closing wall with door and window

A wall for the fourth side of the gazebo. Open the door and window, or keep them closed for a solid wall.

> www.brimo.ie/fourth-wall-with-door



Weights and pegs

Steel, sand and water weights for hard surfaces, pegs for grass and soil.

> www.brimo.ie/weights-for-pop-up-gazebos



Counter half wall

Half-height wall (100 cm) under the sales counter – covers the space beneath the counter, ideal for a logo.

> www.brimo.ie/rail-skirt-for-tent



Rain gutter between gazebos

Joins two gazebos set up side by side and drains rainwater from the gap between them.

> www.brimo.ie/tent-gutter

Accessories and spare parts

You will find weights, pegs, walls, bags and other accessories at www.brimo.ie/accessories. When ordering spare parts, send us a photo of the part via the form at www.brimo.ie/spare-parts – we will advise you which part is right for your gazebo.



INTENDED USE AND CONDITIONS OF USE

Before buying and before use: is this gazebo right for you? Read the following conditions. If you need to use the gazebo differently, it is not suitable for you.

- **Intended use:** The BRIMO pop-up gazebo is a mobile, quick-folding shelter for short-term, temporary cover – for example at markets, exhibitions, sporting, corporate and social events or family celebrations. **It is not intended for permanent or long-term cover** (e.g. for a whole season in the garden, on the patio or at business premises, or as a shelter for cars, machinery or animals).
- **The gazebo is not** a building, pergola, summerhouse or garage and is not intended for storing items.
- **Supervision:** A gazebo that is up must be supervised by a person who keeps an eye on the weather and takes the gazebo down in good time if necessary. The gazebo may only stay up overnight if someone is present with it. If nobody will be with the gazebo, take it down.
- **After use:** At the end of use (the event), take the gazebo down, dry it and store it. Do not leave the gazebo up continuously for several days, weeks or a whole season.
- **Why:** The frame and the polyester fabric are designed to be put up, folded and transported repeatedly, not for permanent exposure to the weather. During prolonged continuous exposure, UV radiation, rain, moisture, temperature changes and wind gradually weaken the polyester fabric (fading, loss of strength and water resistance, embrittlement, tearing, mould) and put stress on the frame and its mechanisms (corrosion, loosening and deformation of joints). If the gazebo is left outdoors permanently, this wear occurs much faster than with the intended short-term use. The frame and fabric materials have been chosen deliberately: if we used materials suitable for permanent cover, the gazebo would lose its main purpose – fast, mobile cover.
- **Use contrary to the intended purpose:** If you leave the gazebo up overnight unsupervised, when nobody is present with it, or use it as permanent or long-term cover, please note that you are using it contrary to its intended purpose and to this manual. Wear and damage resulting from this are not product defects, and a claim in respect of them may be rejected. This does not, however, affect warranty defects that arose during manufacture or material defects.

 **Read this manual before using this product. Failure to do so may result in serious injury or damage to property. KEEP THIS MANUAL and pass it on to anyone who will use the gazebo.**

Things you should know

- All shelters have scissor frames intended for short-term cover and **MUST** be packed away and stored in adverse weather such as storms, rain, wind or other forces of nature.
- Your gazebo is supplied with 8 – 12 steel pegs. While the gazebo is in use, the anchoring elements **MUST** always be firmly attached to the gazebo and the ground.
- Attach all fastenings at the inner corners and along the sides of the roof to the frame. These measures maximise safety; however, given the unpredictable nature of the weather, they may not prevent damage.
- For safety reasons, we recommend that the gazebo be put up by two people. Make sure there are no sharp objects in the area. Keep clear of overhead power lines, tree branches and other obstructions.

- Prolonged exposure to the sun can seriously damage the fabric or cause the polyester to fade.
- Children may only be in or near the gazebo under adult supervision; do not let them climb on or hang from the frame.

Warnings and weather conditions

- The warnings, cautions and instructions in this manual cannot cover all possible conditions and situations that may occur. Common sense and caution on the part of the user are factors that extend the life of the product and reduce the likelihood of injury.
- The gazebo is made for temporary cover, during which the weather must be monitored, and it must be taken down when you are not present. Because the weather is unpredictable, the installer / end user must use their own good judgement and knowledge of local conditions during installation and use.
- The installer / end user is responsible for anticipating adverse weather and for the method of installation. Keep an eye on the weather and take the gazebo down in good time if it worsens.
- **Rain:** Under certain weather conditions, rainwater can collect on the fabric and form 'troughs' or 'pools on the roof', especially if the gazebo is not set up correctly (roof not taut, uneven ground). The weight of the collected water can cause damage. Remove water from the roof regularly and take the gazebo down in heavy rain.
- **Wind:** Wind, or wind with rain, can cause the frame / roof to work loose. It is very important to check the nuts and bolts routinely and to make sure the roof is correctly tensioned. Take the gazebo down in stronger winds. Side walls increase the area the wind can push against – in windy conditions remove them or take the gazebo down.
- **Lightning:** Take the gazebo down immediately in the event of lightning and thunderstorms. Take shelter in a safe place.
- **Snow:** The gazebo is not designed or suitable for any load on the roof, including a layer of snow. You should not use the gazebo if you cannot prevent load on the roof, for example from snow. Do not load the top part of the gazebo frame with objects. Weights may only be placed at the bottom of the legs.
- **Fire and heat:** Keep a safe distance from open fire, flames and heat sources (barbecue, heater, candles). Exposure of the fabric to temperatures above 100 °C may cause the fabric to shrink or catch fire.

Factors that cause premature deterioration and may shorten the life of the gazebo

- Using the gazebo as a permanent or long-term shelter and leaving it up unsupervised (for example overnight, when nobody is present with it).
- Incorrect handling during set-up/take-down on rough surfaces will cause damage.
- Walking on the fabric during set-up/take-down will cause small holes and abrasions.
- Prolonged use of the gazebo without cleaning, and storing a gazebo that has not been thoroughly dried. Even a slightly damp product can encourage mould growth in storage. Removing mould may require harsh cleaning products, which can cause premature wear of the fabric. The best measure is to prevent mould by following the procedures above.
- Highly abrasive cleaning methods, including wire brushes, electric cleaners or commercial washing machines, can lead to premature wear and damage to the gazebo fabrics.

Safety and liability for damage

- The person who put up or operates the gazebo is responsible for its safe set-up, anchoring and supervision, for assessing the location and weather conditions, and for taking the gazebo down in good time.
- An unanchored gazebo, a gazebo left unsupervised or a gazebo put up in wind, storms or snow may be lifted, overturned or damaged and may cause personal injury, damage to property (e.g. vehicles, buildings, windows, surrounding objects) or damage to the gazebo itself.
- Damage resulting from failure to follow the instructions in this manual or from use of the gazebo contrary to its intended purpose shall be borne, in accordance with the law, by whoever caused it. This does not affect BRIMO's liability for product defects under the law.
- Do not modify the gazebo (drilling, welding, fixing it permanently to a building, adding other roofs or covers). Modifications may reduce the safety and strength of the gazebo.
- If you lend the gazebo or someone else puts it up, give them this manual as well.
- For commercial use (markets, events, hire), we recommend taking out public liability insurance.

Warranty and claims

The seller is liable for defects that the product has on receipt and for defects that appear during the statutory period (your statutory rights / legal guarantee), to the extent and within the periods laid down by the law of the country of purchase; for consumers this period is at least 24 months from receipt of the goods. For purchases by businesses (with a company registration number / VAT number), this period is 12 months.

Extended warranty: BRIMO provides consumers with an extended (commercial) 5-year warranty on the gazebo and guarantees the availability of spare parts for 10 years, in accordance with the terms stated with the product and in the terms and conditions on www.brimo.ie. The extended warranty is voluntary and covers manufacturing and material defects of a gazebo that has been used in accordance with its intended purpose and this manual.

The following, in particular, are not considered product defects and are not covered by the warranty:

- normal wear and tear appropriate to the length and manner of use (e.g. fading of colours, abrasions, wear of sliders, straps and hook-and-loop fasteners),
- wear and damage resulting from use contrary to the intended purpose – leaving the gazebo up permanently or long-term, leaving it unsupervised, including overnight,
- damage caused by wind, storms, snow, collected water or other weather conditions if the gazebo was not anchored or taken down in good time in accordance with this manual,
- mechanical damage (holes, punctures, tears, bent or broken parts) caused by incorrect handling, falls, impacts or during transport,
- wear-through of the roof by the frame during transport or by pressure of the frame on the fabric when folded (transport or storage with the roof on the frame),
- mould, stains and corrosion from storing the gazebo damp, damage caused by aggressive cleaning, fire or heat,
- damage caused by modifications or repairs carried out by anyone other than BRIMO.

Claims: Follow the complaints procedure (warranty claim terms) on www.brimo.ie. Enclose proof of purchase, a description of the defect and photos. When assessing a claim, we may ask you for information about how and for how long the gazebo was used; we assess the condition of the product

(e.g. the extent of fading, signs of prolonged exposure to the weather) in relation to its intended use.

BRIMO[®] – Hana Godušová, Lermontovova 911/3, 811 05 Bratislava, Slovakia, Company ID (IČO): 50195000. This manual does not limit the consumer's statutory rights.